


Model No: EH1500

Note: When installing, dont tighten all nuts too tight to allow some allowance.
Fasten all nuts firmly only when all parts are fully installed.
This will make installation easier



Scan here for Installation Video

4. Insert this top round telescopic rods

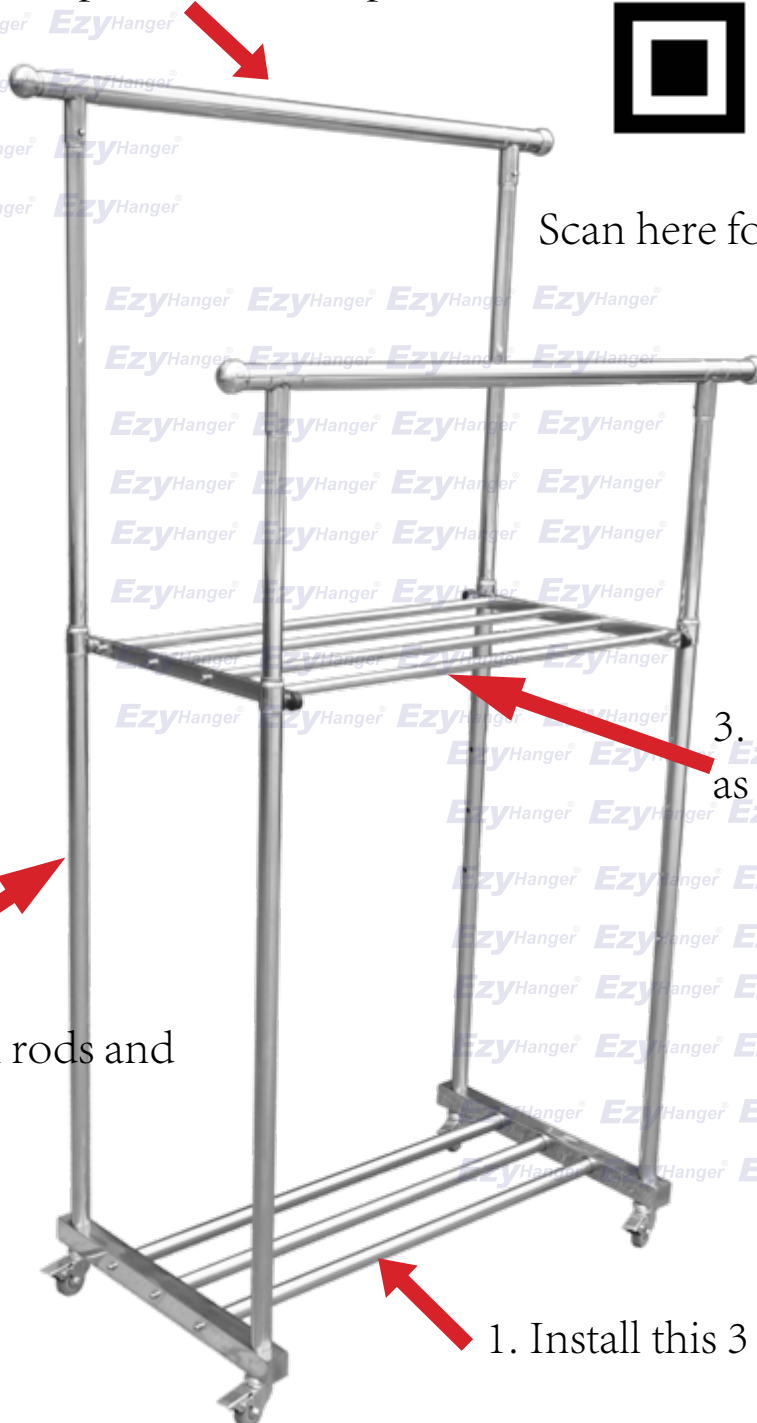

2. Install this vertical rods and install all 4 wheels

3. Install this section as shown

1. Install this 3 round rods